



星虹玩具有限公司
STAR RAINBOW TOYS CO.,LTD

Address : Room D2, No. 36, Alley 82, Lane 422, Minzu Rd., Lujhou City ,
Taipei County 247 ,Taiwan (R.O.C.)

TEL:886-2-82853848

FAX:886-2-28484622

E-mail:src@starrainbow.com.tw

Web:www.starrainbow.com.tw

Dealer



INSTRUCTION MANUAL




6mm Cal. Airsoft gun

FULL METAL

SR92 **GAS**
BLOW BACK

Manufactured by SRC www.starrainbow.com.tw Made in Taiwan

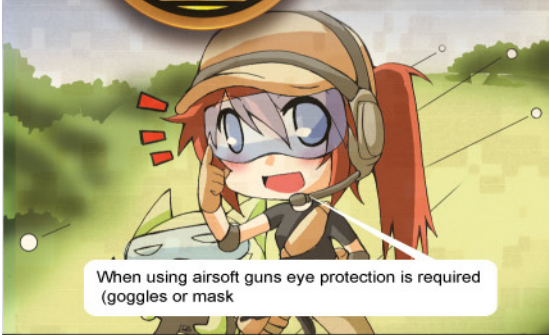

When using airsoft guns eye protection is required (goggles or mask)



Never place your finger on the trigger until you are ready to fire the gun. Always put the gun in safe mode when not in use. Treat every gun as if it is loaded.



Please keep away from children




BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in a safe direction.



Disassembly or modification of this product may result in damage to your Airsoft gun, loss of warranty, and/or serious injury.



Please select a safe place to fire your airsoft gun. Always know your state and local laws concerning airsoft gun use.

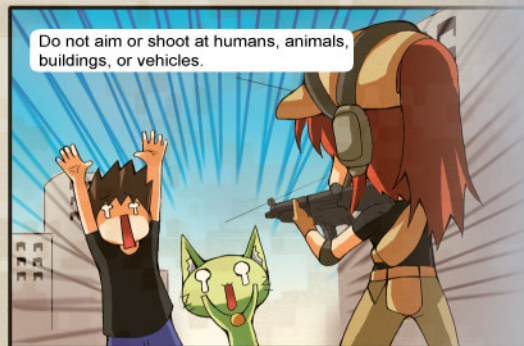

Do not aim or shoot at humans, animals, buildings, or vehicles.



Please use a firearm case or bag when transporting your airsoft gun.



SR92 PARTS DESCRIPTION





GAS INJECTION & LOADING BB BULLETS

⚠ WARNING

TURN THE SAFETY LEVEL SELECTOR TO SAFE MODE . KEEP THE SELECTOR ON SAFE MODE UNTIL YOU ARE READY TO SHOOT.

Safe mode



- 1 TURN THE SAFETY LEVEL SELECTOR TO SAFE MODE .
- 2 PRESS THE MAGAZINE CATCH AND REMOVE THE MAGAZINE BY PULLING IT DOWNWARD.



⚠ WARNING

GREEN GAS IS FLAMMABLE. KEEP AWAY FROM OPEN FLAME WHEN LOADING AND DURING USE.

- 1 TURN THE MAGAZINE UPSIDE DOWN WITH GAS REFILL INLET FACING UPWARDS.
- 2 KEEPING THE GAS CYLINDER INVERTED AND VERTICAL TO THE MAGAZINE, INJECT GAS UNTIL COMPLETELY FILLED.



- 1 PULL THE MAGAZINE FEED SPRING DOWN AND HOLD.
- 2 LOAD BBs INTO THE MAGAZINE AS SHOWN IN THE PICTURE BELOW.





SHOOTING

⚠ WARNING

ALWAYS KEEP YOUR FINGER OFF THE TRIGGER UNTIL YOU ARE READY TO FIRE THE GUN. MAKE SURE THE MUZZLE IS ALWAYS POINTED IN A SAFE DIRECTION.

INSERT THE MAGAZINE UNTIL YOU HEAR IT CLICK INTO PLACE. THE GUN IS NOW READY TO FIRE.



⚠ WARNING

GREEN GAS IS FLAMMABLE. KEEP AWAY FROM OPEN FLAME WHEN LOADING AND DURING USE.

SET THE SELECTOR SWITCH TO FIRE MODE

Fire mode



PULL THE SLIDE BACKWARDS AND RELEASE.





SR92

⚠ WARNING

WARNING - WHEN FIRING THIS GUN, THE SLIDE MOVES RAPIDLY BACKWARDS AND FORWARDS (BLOW BACK ACTION). TO AVOID INJURY, KEEP FINGERS OFF THE SLIDE. DO NOT HOLD PISTOL CLOSE TO THE FACE OR HEAD.

PULL THE TRIGGER TO FIRE THE GUN.



HOP-UP ADJUSTMENT

- 1** REMOVE THE MAGAZINE AND SET THE SELECTOR SWITCH TO FIRE MODE.



- 2** PRESS AND HOLD THE SLIDE RELEASE BUTTON.




- 3** TURN THE SLIDE RELEASE LEVER TO RELEASE MODE.



- 4** PULL THE SLIDE FORWARD TO SEPARATE FROM THE GUN AND EXPOSE THE HOP UP ADJUSTMENT.



- 5** USE ALLEN KEY ADJUST THE HOP-UP.

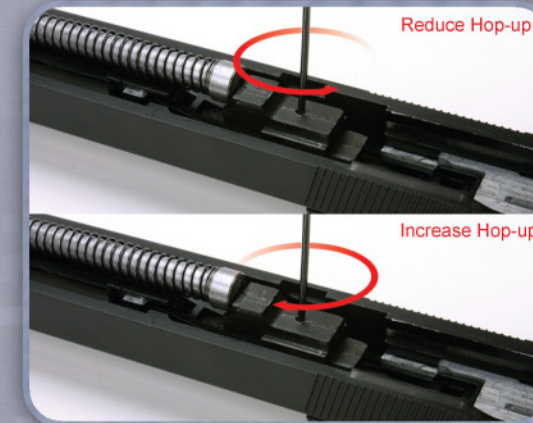

Wrong Too much Hop-up
(Reduce Hop-Up Setting)

Right

Wrong Not enough Hop-up
(Increase Hop-up setting)





SR92 SCHEMATIC



SR92 PARTS LIST

NO	DESCRIPTION	NO	DESCRIPTION	NO	DESCRIPTION
1	Outer Barrel	24	Stop Plate	M1	Air Nozzle
2	Barrel Pin	25	Shear	M2	Air Valve
3	Inner Barrel	26	Shear Spring	M3	Air Valve Spring
4	HopUp Adjust Ring	27	Screw	M4	Piston Ring
5	Set screw	28	Trigger Pin	M5	Air Nozzle Spring
6	Hop Bucking	29	Pin	M6	Piston
7	Cushion	30	Brass Tube	M7	CS
8	Barrel Base	31	Stop Plate Spring	M8	O Ring
9	Screw	32	Frame	M9	Cylinder Base
10	Barrel Lock	33	Slide Release Button	M10	Screw
11	Recoil Spring	34	Triger	Magazine set	
12	Recoil Spring Guide	35	Trigger Link	A1	Magazine Lip
13	Slide	36	Grip	A2	Air Nozzle Rubber
14	Safety Lever Lock	37	Grip Screw	A3	Magazine Frame
15	Safety Lever - L	38	Slide Release lever	A4	Valve
16	Safety Lever - R	39	Slide Stop	A5	Nebulization Tube
17	Safety Lever Bar	40	Slide Stop Spring	A6	O Ring
18	Trigger Base	41	Magazine Release Button	A7	Magazine Base
19	Trigger Spring	42	Pin	A8	Gas Valve
20	Trigger	43	Hammer Spring	A9	Pin
21	Hammer lever	44	Hammer Sping Cover	A10	Magazine Spring
22	Hammer lever Spring			A11	Magazine Bar
23	Hammer	Air Nozzle set		A12	Pin